


GROUND CHECK COMPATIBILITY

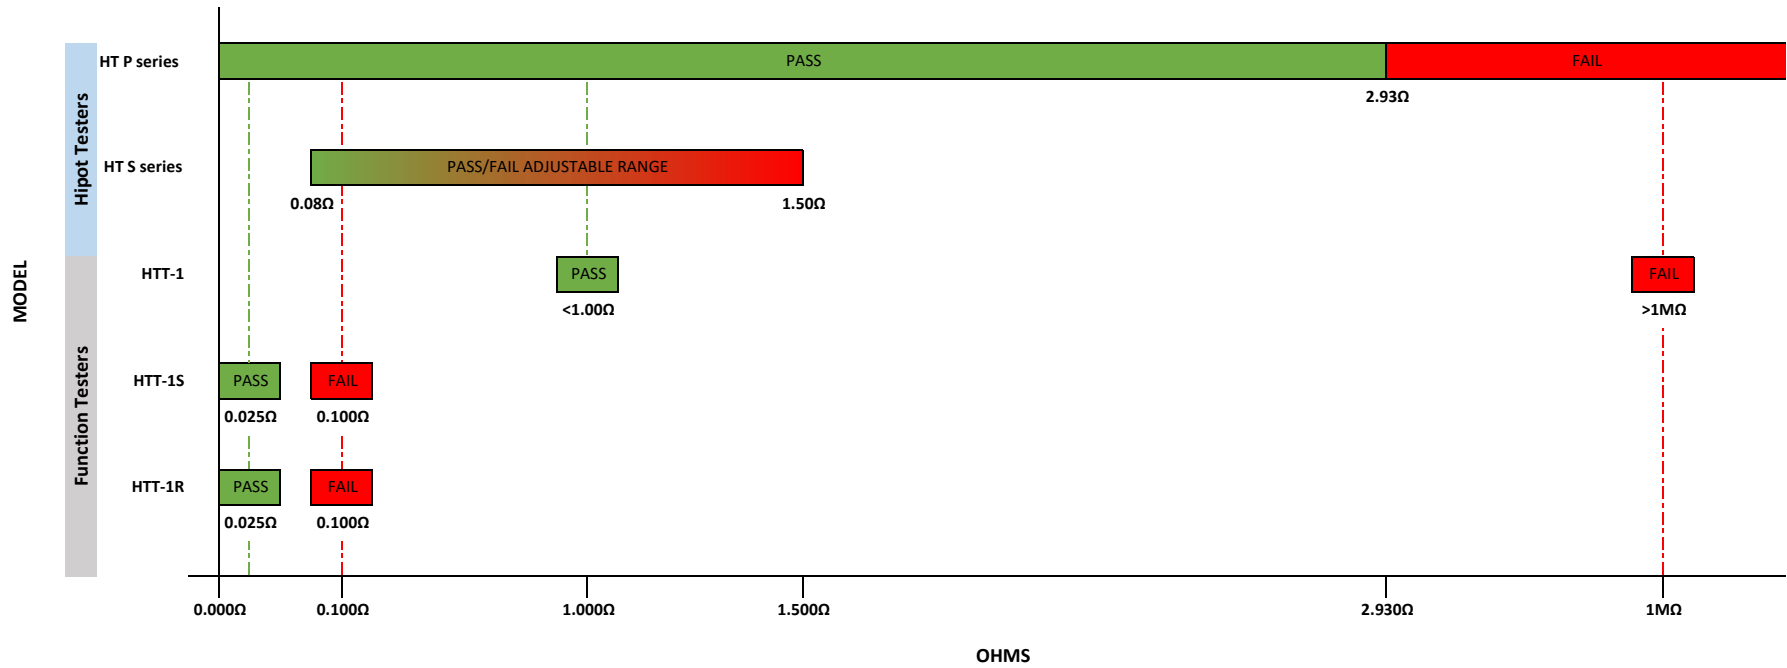

Hipot Testers	HT P series	Compatible	No Compatible	No Compatible
	HT S series	Compatible Set ground to max	Compatible Set ground to min See Note 1	Compatible Set ground to min See Note 2
		HTT-1	HTT-1S	HTT-1R
		Function Testers		

Note 1: HTT-1S leads must be offset by holding HTT-1 button and then holding the red offset button of Hipot Tester

Note 2: HTT-1R leads must be manually offset by connecting the leads to the Hipot Tester and shorting the ground (green) and return (black) lead and then holding the red offset button of Hipot Tester