

# 00-RI

## Standard Relay interface Option

For Models HT-S series and HT-P V2 series

Connection	
Signal	Pin number
Start	1
Reset	2
COM1	3
Ground OK	5
Ground Fail	6
Full Voltage	7
Excess leakage	8
Hipot Pass	9
Hipot Fail	10
Any Failure	11
COM2	12

Input Voltage Options
Customer to choose one
5V
12V
24V

